
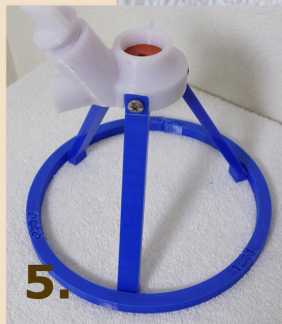
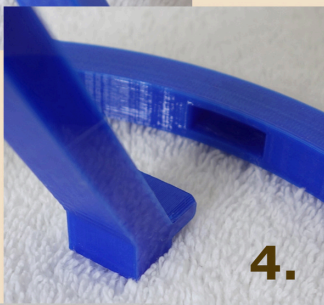


## Pg.3 Construction 1

Press Tabs into Openings to Connect Base Ring Pieces

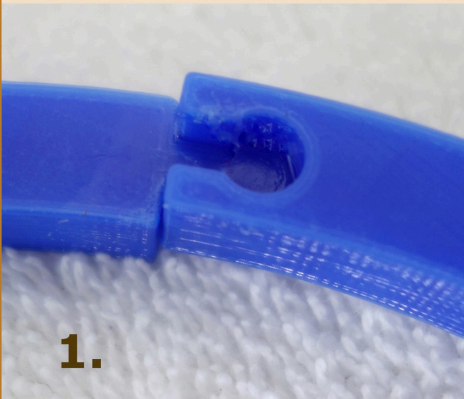

Place a nut into a slot in the underside of the base. Attach a leg to the base by running a screw through the leg, into the nut within the base. Screw in very loosely. Repeat for each leg.

With legs loosely attached, place leg ends into a corresponding slot into the ring. With legs firmly seated, carefully tighten the screws going into the base. Never operate Hatcher without the Ring Base.

Do not overtighten Legs.